

INSTALLING THE PUMP CONNECTOR

Please read these instructions before beginning installation to ensure easy installation of the pump connector.


1. Remove the included connector components from the bag



2. Assemble the connector with the cable. Detailed instructions can be found in the connector bag or in the pump's operating manual



Warning! Danger of death!

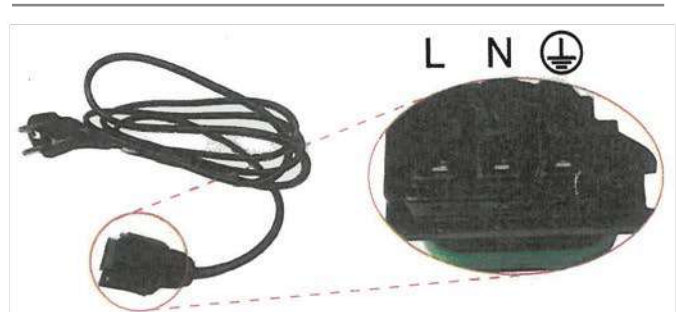

3. Remove the pump assembly from the insulation and connect the power supply plug to the pump's terminal box.



4. Reinstall the assembly into the insulation. The pump assembly is now ready for the next installation steps.

